


FL45-LAVSUG
ENTREPRENØRDYKPUMPE

RESERVEDELSTEGNING

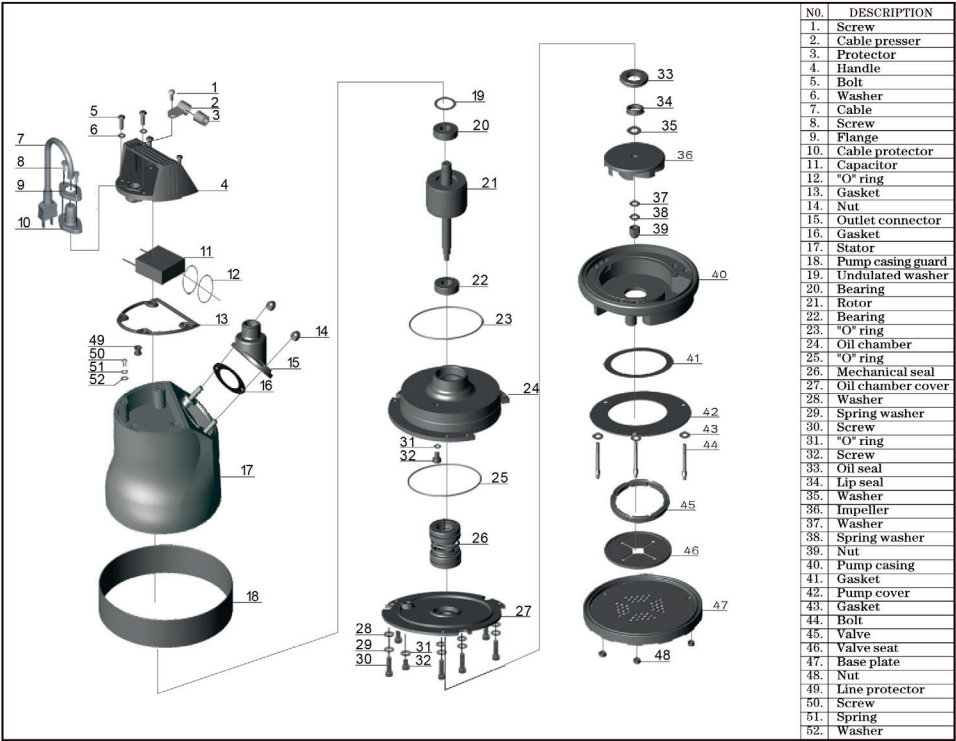

FL45-LOW SUCTION CONSTRUCTION SUBMERSIBLE PUMP

SPAREPART LIST

NØ.		DESCRIPTION
1.	Screw	
2.	Cable presser	
3.	Protector	
4.	Handle	
5.	Bolt	
6.	Washer	
7.	Cable	
8.	Screw	
9.	Flange	
10.	Cable protector	
11.	Capacitor	
12.	"O" ring	
13.	Gasket	
14.	Nut	
15.	Outlet connector	
16.	Gasket	
17.	Stator	
18.	Pump casing guard	
19.	Undulated washer	
20.	Bearing	
21.	Rotor	
22.	Bearing	
23.	"O" ring	
24.	Oil chamber	
25.	"O" ring	
26.	Mechanical seal	
27.	Oil chamber cover	
28.	Washer	
29.	Spring washer	
30.	Screw	
31.	"O" ring	
32.	Screw	
33.	Oil seal	
34.	Lip seal	
35.	Washer	
36.	Impeller	
37.	Washer	
38.	Spring washer	
39.	Nut	
40.	Pump casing	
41.	Gasket	
42.	Pump cover	
43.	Gasket	
44.	Bolt	
45.	Valve	
46.	Valve seat	
47.	Base plate	
48.	Nut	
49.	Line protector	
50.	Screw	
51.	Spring	
52.	Washer	